


How to Set the Temperature on a HAKKO FX-888D

1. Turn ON the power. The display will show the following:



2. Let the temperature come up to the factory default of 750°F



3. Hold the  button for at least 2 seconds. The hundreds digit will start to flash





Hundreds Digit
(outlined in yellow
box) will begin to
flash.

IMPORTANT: If you see the following display, you are doing this wrong. Start over.




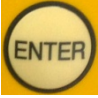
(Note the two extra dots)

4. Press the  button to select the value, then press  to move to the next digit. When you finish the last digit, the temperature is set.

If you mistakenly change calibration instead of temperature...


How to Reset the HAKKO FX-888D

1. Turn OFF the power.


2. Hold the  and  button at the same time and turn ON the power.

3. Continue holding the buttons until the display shows 'A' like you see below



4. Press  one time so the display shows 'U' like you see below



5. Press . The station is now reset to factory defaults.