HAKOFT-710

Thank you for purchasing HAKKO FT-710 tip cleaner.

Please read this manual before operating the HAKKO FT-710.

Keep this manual readily accessible for reference.

1. PACKING LIST AND PART NAMES

Please check to make sure that all items listed below are included in the package

HAKKO FT-710	1 Lock nut	1
Receptacle A		1
Receptacle B	1 Gauge	1
Moto	Cleaning brush A	Grounding screw
Lock nut	Cover	Gauge
Receptacle	A DC ja	Solder waste collector Base
AC adapter	Receptacle B Pulley belt	

2. SPECIFICATIONS

●HAKKO FT-710			
Model	HAKKO FT-710		
Motor rating	24VDC 50mA		
Power consumption	5W		
Standby power consumption	0.6W		
Dimensions	71 (W)×77 (H)×107 (D) mm		
Weight	450g		
Brush rotational speed	2500rpm		

AC adapter

Rating	24VDC 200mA		
Dimensions	35(W) × 25(H) × 50(D)mm		
Weight	80g		
**Olgin	cog		

- * This product is protected against electrostatic discharge.
- * Specifications and design are subject to change without notice.

3. SAFETY NOTICES

● To prevent accidents or damage to the HAKKO FT710, be sure to observe the following:

⚠ CAUTION

- ●Do not modify the HAKKO FT-710.
- Do not use the product as an iron holder.
- Do not carry the product by the receptacle or AC adapter cord.
- •When carrying the product, hold by the base.
- Do not use AC adapters other than supplied.
- Always hold the plug when plugging or unplugging the AC adapter into or from the DC jack.
- Before replacing parts or storing the product, turn off the power and allow the product to cool to room temperature.
- ●Do not allow the HAKKO FT-710 to become wet, or use it when hands are wet.
- Use only genuine HAKKO replacement parts.
- •While using HAKKO FT-710, do not do anything which may cause bodily harm.


4. OPERATION


4.1 Aligning the Iron

- Referring to the optional parts list in 6. Parts List, install the applicable receptacle for the iron or the iron tip used.
- Insert the iron tip while cold into the receptacle. Rotate the receptacle to align the point of the iron tip to the line connecting to the rotational centers of the brushes as seen in the illustration.
- Secure the receptacle with the lock nut.

NOTE:

Using the supplied gauge will make it easier to align the iron tip.

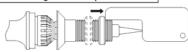

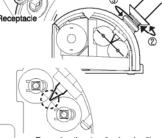

Removing the cleaning brush will make it easier to align the iron tip.

⚠ CAUTION

- · A failure to align the iron tip or the use of the wrong receptacles may result in poor cleaning and/or damage to the cleaning brushes.
- Note that prolonged brushing could promote deterioration of iron tips while tip is

4. OPERATION

4.2 Installing and removing the cover

 The cover of the unit cannot be removed as long as the AC adapter is plugged into the DC jack. Be sure to unplug the AC adapter before attempting to remove the cover from the unit.

© Remove the cover from the base.

① Unplug the adapter.

When removing the cover, hold

part for both sides.

⚠ CAUTION


Do not attempt to use the unit without installing it into the base.

4.3 Grounding the unit

- Connect a grounding wire to the M4 grounding scrw.
- Position the grounding wire through the lead-out hole in the back of the base and connect to an appropriate grounding point.

4.4 Cleaning an iron tip

Plug the AC adapter into the DC jack and insert the iron tip into the receptacle; the iron tip is brushed and cleaned.

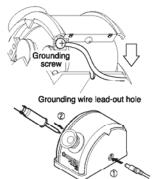


This unit allows quick cleaning of iron tips. Note that prolonged brushing could promote deterioration of iron tips.

5. MAINTENANCE

5.1 Removing solder waste

- (1) Unplug the AC adapter from the DC jack
- ② Holding the tabs on the sides of the cover, remove the cover from the base.
- ③ Remove the solder waste collector from the base and clean out the tray.

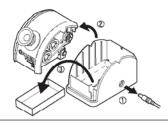


⚠ CAUTION

- Excessive deposit of solder waste in the solder waste collector may contact the cleaning brushes, reducing their service life.
- Solder and flux residue will attach other than solder waste collector, leaving them attach may result in poor cleaning.

5.2 Replacing the cleaning brushes

- Remove the cover in the same manner as for "Removing solder waste".
- Pull the cleaning brushes out of the brush holding shafts.
- Insert new cleaning brushes into the Brush fixing shafts.

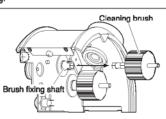

NOTE:

Besides normal cleaning brushes, Metal brushes are also abailable which provide higher cleaning power.

6. PARTS LIST

● REPLACEMENT PARTS

•	NEI ENGEMENT TANTO					
Part No. Part Name			Specifications			
	A1566 Cleaning brush A		Plastic brushes, 2 pcs.			
	A1567	Cleaning brush B	Metal brushes, 2 pcs.			
	B3520	Pulley belt				
	B3521	Solder waste collector				
	B3522	Base	With rubber feet.			
	B3523	Lock nut				

OPTIONAL PARTS

Part No.	Part Name	Specifications		
B3517	Receptacle A	For FM-2027, FM-2028, FX-901		
B3518	Receptacle B	For FX-8801, 900M, 907, 957, 933		
B3519 Receptacle C		For FM-2026, 917, FX-8301		

^{*}When using the soldering iron other than those above, contact your HAKKO representative.

^{**}Some tip is not applicable to the above receptacle. Please refer to back side about the tip other than those above, and confirm the corresponding tip before using.

The following tip is not compatible with standard receptacle. Please contact your HAKKO representative for option.

Tip Series	Part No.		
T7	T7-KF		
T12	T12-WB2		
	T12-WD08		
	T12-WD12		
	T12-WD16		
	T12-WD52		
	T12-WI		
	T12-DL52		
	T12-KF		
900M	900M-T-LB		
900101	900M-T-1.2LD		

Tip Series	Part No.
T20	T20-K
	T20-KU
	T20-BL
	T20-BL2
	T20-BL3
	T10-J02
	T10-K
T10	T10-KL
110	T10-KU
	T10-LB
	T10-LI

The following tip can not be cleaned with FT-710.

Tip Series	Part No.	
T7	T7-JL02	
17	SPATULA	
	T12-JL02	
T12	QUAD	
112	TUNNEL	
	SPATULA	
900M	900M-T-H	
900W	900M-T-1.8H	

■ Electrostatic Protection

This product includes such features as electrically conductive plastic parts and grounding of the handpiece and station as measures to protect the device to be soldered from the effects of static electricity. Be sure to observe the following instructions:

- 1. The handle and other plastic parts are not insulators, they are conductors. When replacing parts or repairing, take sufficient care not to expose live electrical parts or damage insulation materials.
- 2. Be sure to ground the unit during use.
- ※ 各言語(日本語、英語、中国語、フランス語、ドイツ語、韓国語)の取扱説明書は以下のURL、HAKKO Document Portalからダウンロードしてご覧いただけます。

(商品によっては設定の無い言語がありますが、ご了承ください)

- *各國語言(日語,英語,中文,法語,德語,韓語)的使用説明書可以通過以下网站的HAKKO Document Portal 下載參閱。 (有一部分的產品沒有設定外語對應,請見諒)
- * Instruction manual for the language, Japanese, English, Chinese, French, German and Korean can be downloaded from the following URL, HAKKO Document Portal. (Please note that some language may not be available depending on the product.)



https://doc.hakko.com

HAKKO

白光株式会社

http://www.hakko.com

〒556-0024 大阪市浪速区塩草2丁目4番5号 TEL: (06) 6561-1574(代) FAX: (06) 6568-0821



HAKKO CORPORATION

HEAD OFFICE TEL:+81-6-6561-3225 FAX:+81-6-6561-8466

OVERSEAS AFFILIATES
U.S.A.: AMERICAN HAKKO PRODUC
TEL: (661) 294-0090 FAX: (661) 294-00
Töli Free (800)88-HAKKO
1 2 5 5 6
http://www.hakkousa.com http://www.hakko.usa.com HONG KONG: HAKKO DEVELOPMENT CO , LTD. TEL: 2811-5588 FAX: 2590-0217 http://www.hakko.com.hk E-mail.dnlo@hakko.com.hk

UCTS PTE., LTD.

ase access to the following address for the other Sales affiliates. http://www.hakko.com

中國RoHS: 產品中有毒有害物質或元素的名稱及含量

	有毒有害物質或元素					
部件名稱	鉛(Pb)	汞(Hg)	鎘(Cd)	六價鉻 (Cr(VI))	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
馬達	×	0	0	0	0	0
鎖緊螺母	×	0	0	0	0	0
AC轉接器	×	0	0	0	0	0
清潔刷	×	0	0	0	0	0

〇: 表示該有毒有害物質在該部件所有均質材料中的含量均在SJ/T 11363-2006 標準規定的限量要求以下

×: 表示該有毒有害物質至少在該部件的某一均質材料中的含量超出SJ/T 11363-2006

注有「附帶BS插頭」之時,表示「插頭」為含有有害物質的部件。