

What HMI version software can I use with my HAKKO FR-1418 BGA Rework System?

The HMI software used by the HAKKO FR-1418 BGA Rework System is integrated with the firmware that is included in the PLC controllers used in the system design. Even if a new HMI software version is released, any upgrade will also require the upgrade of the firmware on the PLC controllers as well.

For reference, the following table shows the HMI version number and matched PLC firmware version:

HMI Version	System	PLC1	PLC2
1.3.5	Hakko/PMT	V2	n/a
1.3.6	Hakko	V2	V3
1.3.7	PMT	V4	n/a
1.3.8.2	Hakko	V2	V3
1.3.9	Hakko	V2	V3
1.3.9	PMT	V4	n/a
1.3.9.1	Hakko	V2	V3
1.3.10	Hakko	V2	V3
1.5.5	PMT	V3	V6
1.5.6	PMT	V4	V7
1.5.7	PMT	V4	V8
1.5.8	PMT	V4	V8
1.5.10	PMT	V6	V9
1.5.10.1	Hakko/PMT	V6	V10
1.5.12	Hakko/PMT	V6	V10
1.5.13	Hakko/PMT	V6	V10
1.5.14	Hakko/PMT	V7	V10
2.0.1	Hakko/PMT	V8	V12

```
.telerik-reTable-4 { border-collapse: collapse; border: solid 0px; font-family: Tahoma; }
.telerik-reTable-4 tr.telerik-reTableHeaderRow-4 { border-width: 1.0pt 1.0pt 3.0pt 1.0pt;
margin-top: 0in; margin-right: 0in; margin-bottom: 10.0pt; margin-left: 0in; line-height:
115%; font-size: 11.0pt; font-family: "Calibri","sans-serif"; width: 119.7pt; background:
#4F81BD; padding: 0in 5.4pt 0in 5.4pt; color: #FFFFFF; }
.telerik-reTable-4
td.telerik-reTableHeaderFirstCol-4 { padding: 0in 5.4pt 0in 5.4pt; }
.telerik-reTable-4
td.telerik-reTableHeaderLastCol-4 { padding: 0in 5.4pt 0in 5.4pt; }
.telerik-reTable-4
td.telerik-reTableHeaderOddCol-4 { padding: 0in 5.4pt 0in 5.4pt; }
.telerik-reTable-4
td.telerik-reTableHeaderEvenCol-4 { padding: 0in 5.4pt 0in 5.4pt; }
.telerik-reTable-4
tr.telerik-reTableOddRow-4 { border-width: 1pt; color: #666666; font-size: 10pt;
vertical-align: top; border-bottom-style: solid; border-bottom-color: #4F81BD; }
.telerik-reTable-4 tr.telerik-reTableEvenRow-4 { color: #666666; font-size: 10pt;
vertical-align: top; }
.telerik-reTable-4 td.telerik-reTableFirstCol-4 { border-width: 1pt;
border-color: #4F81BD; padding: 0in 5.4pt 0in 5.4pt; border-bottom-style: solid;
```

What HMI version software can I use with my HAKKO FR-1418 BGA Rework System?

```
border-left-style: solid; } .telerik-reTable-4 td.telerik-reTableLastCol-4 { border-width: 1pt;
border-color: #4F81BD; border-bottom-style: solid; border-right-style: solid; padding: 0in
5.4pt 0in 5.4pt; } .telerik-reTable-4 td.telerik-reTableOddCol-4 { border-width: 1pt;
border-color: #4F81BD; padding: 0in 5.4pt 0in 5.4pt; border-bottom-style: solid; }
.telerik-reTable-4 td.telerik-reTableEvenCol-4 { border-width: 1pt; border-color: #4F81BD;
padding: 0in 5.4pt 0in 5.4pt; border-bottom-style: solid; } .telerik-reTable-4
tr.telerik-reTableFooterRow-4 { color: #355C8C; background-color: #FFFFFF; font-size:
10pt; vertical-align: top; padding: 0in 5.4pt 0in 5.4pt; } .telerik-reTable-4
td.telerik-reTableFooterFirstCol-4 { border-width: 1pt; border-color: #4F81BD;
border-bottom-style: solid; border-left-style: solid; padding: 0in 5.4pt 0in 5.4pt; }
.telerik-reTable-4 td.telerik-reTableFooterLastCol-4 { border-width: 1pt; border-color:
#4F81BD; border-bottom-style: solid; border-right-style: solid; padding: 0in 5.4pt 0in
5.4pt; } .telerik-reTable-4 td.telerik-reTableFooterOddCol-4 { border-width: 1pt;
border-color: #4F81BD; border-bottom-style: solid; padding: 0in 5.4pt 0in 5.4pt; }
.telerik-reTable-4 td.telerik-reTableFooterEvenCol-4 { border-width: 1pt; border-color:
#4F81BD; border-bottom-style: solid; padding: 0in 5.4pt 0in 5.4pt; }
```

HakkoUSA Knowledge Base

<https://kb.hakkousa.com/Knowledgebase/10614/What-HMI-version-software-can-I...>