

## How do I change the temperature on the FX-951?

In order to change the temperature, insert the control card into the slot in the front of the unit. The number on the far left should begin blinking. Press up or down until the desired value has been reached and press the \* button. Repeat this same step for the next two digits. Allow the station a few moments to reach the new temperature.

HakkoUSA Knowledge Base

<https://kb.hakkousa.com/Knowledgebase/11972/How-do-I-change-the-temperature...>