

How long do the filters in the FA-430 last before replacement is needed?

The pre-filters in the FA-430 will need to be replaced when 80% of the pre-filter is clogged or when it was used for 160 hours. The orange lamp will flash when the pre-filter replacement is needed. After the pre-filter has been replaced 10 times and the current pre-filter is 80% clogged or has been used for 160 hours, the main filter will need to be replaced. The orange and red lamp will flash when the main filter replacement is needed.

HakkoUSA Knowledge Base

<https://kb.hakkousa.com/Knowledgebase/11975/How-long-do-the-filters-in-the-...>