

## Why does the S channel on my FM-203 read off?

The S channel needs to be turned on. Hold the S button down for at least 2 seconds to turn it back on. The channel can be turned off by doing the same procedure.

HakkoUSA Knowledge Base

<https://kb.hakkousa.com/Knowledgebase/11996/Why-does-the-S-channel-on-my-FM...>