

## Why is the temperature of my FR-810B dropping?

The temperature of the FR-810B drops once the timer has ran out. To remove the timer, set '---' as the timer setting to have a constant stream of hot air until the work is finished. The 'S' button on the handle or Start/Stop button on the unit can be pressed to stop the hot air.

HakkoUSA Knowledge Base

<https://kb.hakkousa.com/Knowledgebase/12014/Why-is-the-temperature-of-my-FR...>