

How to calibrate the touch screen on the ATX Controller

The process for calibrating the touch screen on the ATX Controller is very simple. It is best to use a touch screen stylus for the most accurate results.

To do the calibration:

1. Turn the ATX Controller ON.
2. Press the Controller button on the main screen.
3. Select SYSTEM MENU.
4. Select SYSTEM SETTINGS.
5. At the bottom of the screen, select TOUCH PANEL.
6. Select CALIBRATION.
7. Using the stylus, touch each of the 5 green points that the display shows you.
8. Confirm the calibration by touching each of the 3 red points. If there is a problem with the calibration, a message will appear letting you know there is a problem and you need to re-do the calibration again.
9. If the calibration is successful, select HOME from the upper right corner of the screen.
10. Select the icon in the upper right corner of the screen to reboot the controller.

HakkoUSA Knowledge Base

<https://kb.hakkousa.com/Knowledgebase/12026/How-to-calibrate-the-touch-scre...>